


WeR@Home™

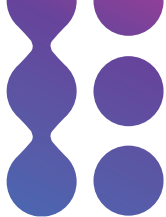

HD Outdoor Camera

(ES800HDO-M01)


Getting Started




To start using your Essence HD Camera, follow these easy steps

1


Where to install the camera

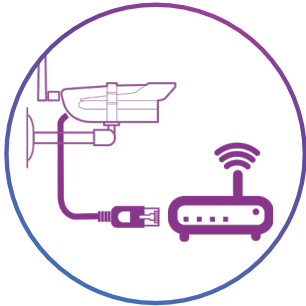


Within Wi-Fi or
cable range

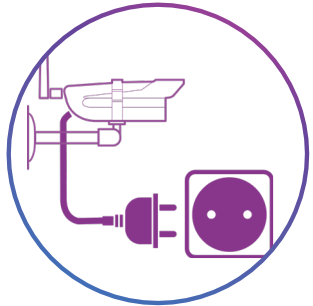

Near power
supply

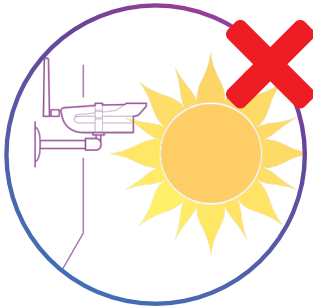


Not in direct
sunlight

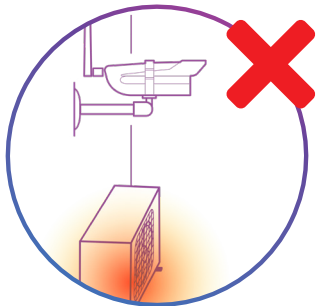

No extreme
temperatures

2 Attach the antenna and cables

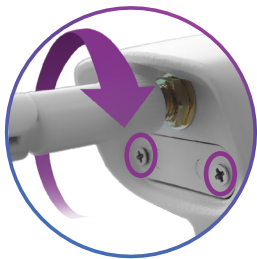


Connect antenna to camera

Optional: Unscrew cover and insert formatted SD card



Connect power cable and ethernet cable (RJ45)

3 Add the camera to WeR@Home™

- 1 Open the WeR@Home™ app
- 2 Tap 
- 3 Tap **DEVICES**
- 4 Tap **Add device**
- 5 Tap **HD Camera**
- 6 Follow the on-screen instructions
- 7 For wireless use: Tap **Configure** and then **Wi-Fi Network**. Remove cable when instructed.


If camera cannot be found:

1. Ensure that smartphone and camera are connected to the same network
2. Press and hold the button next to the power cable for 5 seconds. Wait 30 seconds and try again

4

Mount the camera

- 1 Mark drill sites with holes in base
- 2 Drill holes
- 3 Insert anchors
- 4 Attach base to wall or ceiling with screws
- 5 Use the thumbscrew to attach the mount to the camera (top or bottom)
- 6 Attach the mount to the base
- 7 Tighten with the adjustment knob

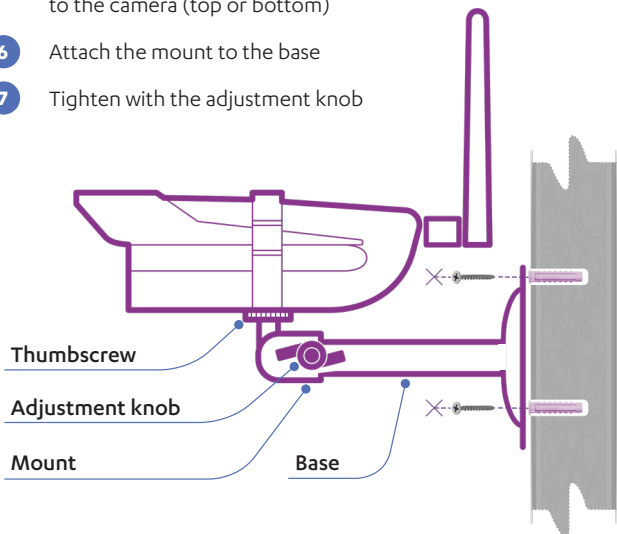

ESUG05156 Rev. 1.1



For more information about installing and using the WeR@Home™ system, see <http://www.essence-grp.com/resources/smart-living-download.html>

Legal notice: http://www.essence-grp.com/html/concerning_documents.html

 **essence**
Better life made possible™